




Retro Kettle

USER MANUAL

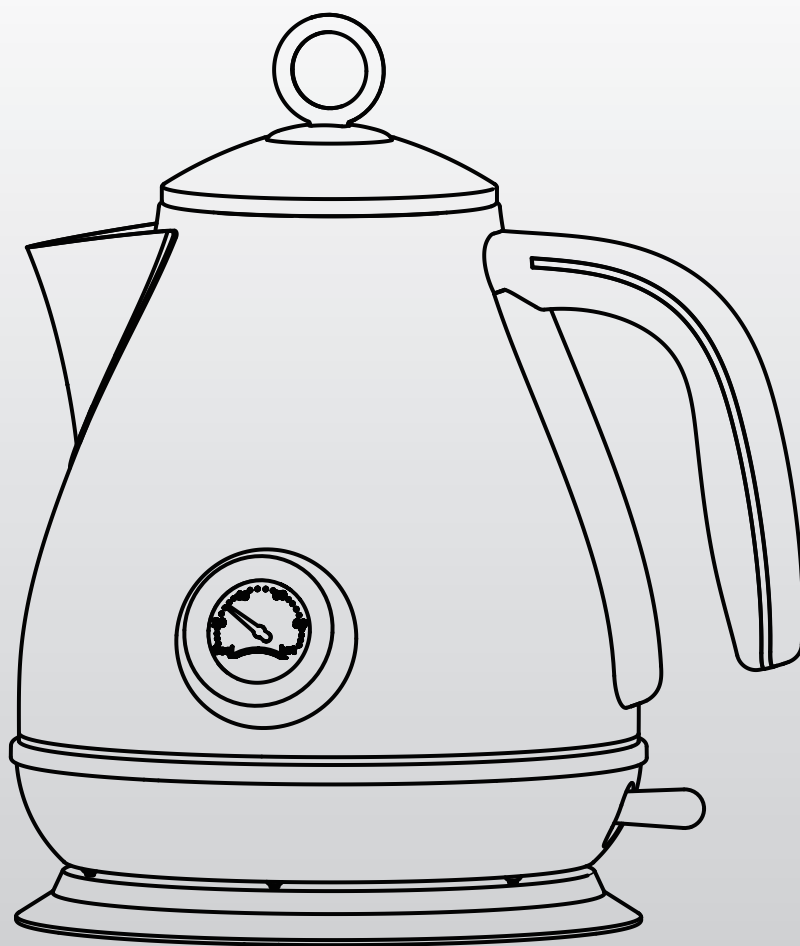

Product SKU: 350131/350132/350113

IMPORTANT SAFEGUARDS

EN

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarize yourself with all operating instructions before using this kettle.
- Before plugging your kettle into the mains socket, visually check that the kettle is intact and has not suffered any damage in transit.
- Check that the voltage indicated on the data plate corresponds with that of the local mains voltage before connecting the appliance to the mains power supply.
- This kettle is only to be used with the base provided.
- Close supervision is required when using this appliance near children.
- Always keep this appliance out of reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended while connected to the mains power supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and while being repaired.
- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular checks should be carried out on the mains cable to ensure there is no evident damage. Should there be any signs of damage, the appliance should not be used.
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Never place the appliance near flammable materials or high pressure containers.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- Do not immerse the appliance, base or its cord in water or any other liquids.
- Do not use this appliance for anything other than its intended use. Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure this appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- Do not cover this appliance.
- Never place this appliance on an electric, gas, or any other type of hob.


WARNING: Do not remove the lid while the water is boiling.

- Never fill the kettle more than its capacity – ensure the water level is between the MIN and MAX marks. If the kettle is overfilled, boiling water may be ejected.
- Always close the lid during use and do not remove the lid while the water is boiling.

CAUTION: The outside surface of the kettle will get hot during use.

- Ensure the kettle is switched off before removing it from the base.

Names of parts

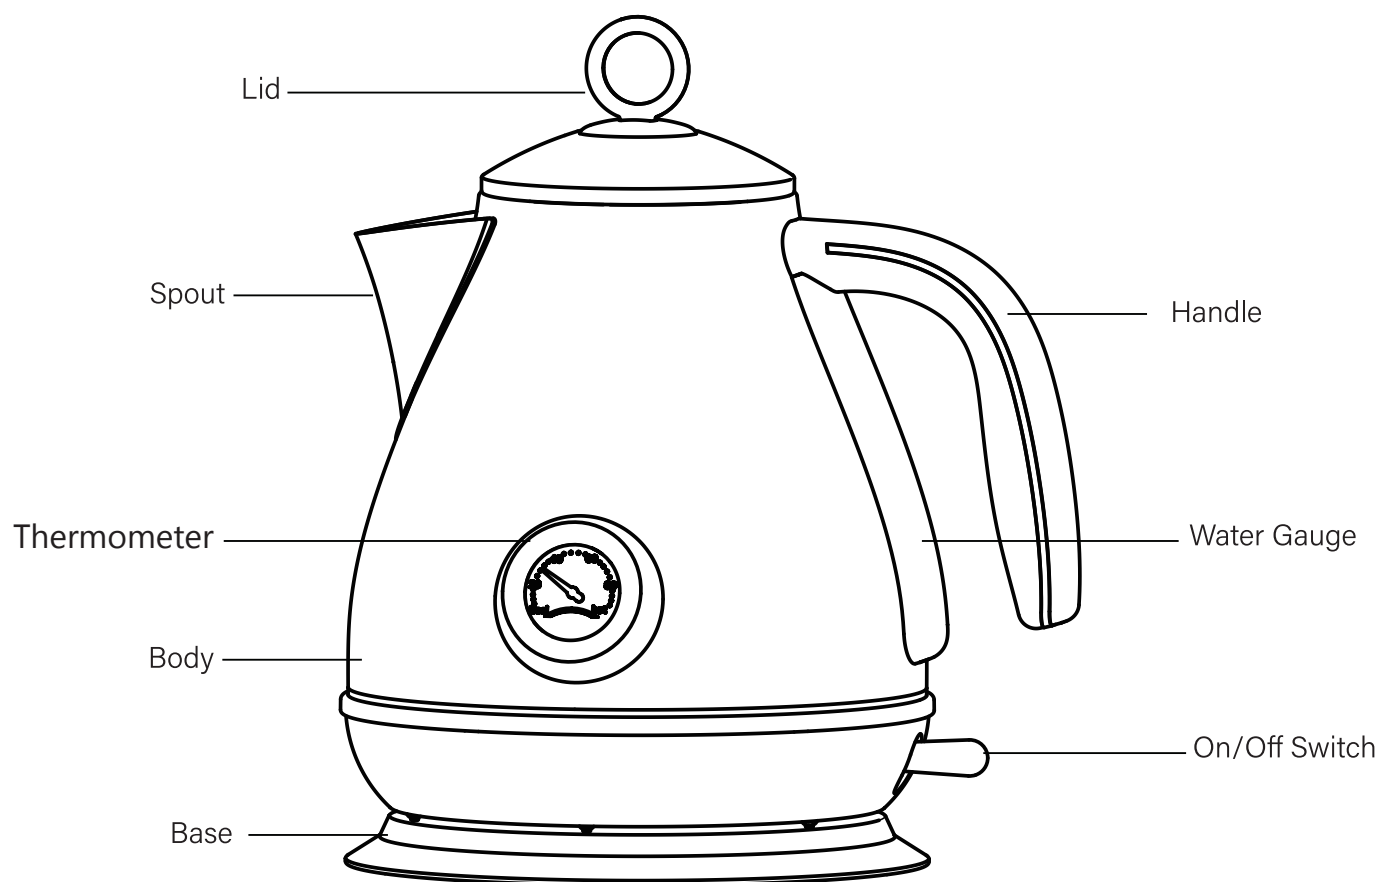

Before the first time you use your kettle

- Please read the operating instructions in this user manual thoroughly and keep the manual in a safe place for future reference.
- Before using the kettle for the first time, fill the kettle with water to the MAX mark and allow it to boil. Pour away the boiled water and then repeat the process. If a slight taste or odour remains, please repeat the above process once more.

Instructions for use

1. Place the kettle on a flat, level surface.
2. Fill the kettle with water to the desired level, ensuring that it is above the MIN mark and below the MAX mark.
3. Place the lid on the kettle and place the kettle onto the base.
4. Insert the mains plug (with dry hands) into the mains socket.
5. Push down the On/Off switch, the light on the bottom edge will illuminate and the water will begin to boil.
6. At the end of the boiling cycle, the kettle will automatically switch off.
7. Wait until the water has finished boiling before removing it from the base.
8. Ensure the lid is properly closed before pouring boiling water – beware of scalding.

Cleaning your kettle

- Do not clean your kettle in a dishwasher.
- Always disconnect the kettle from the mains power supply before cleaning.
- Wipe clean the outside of the kettle with a soft, damp cloth. Never clean any part of the kettle with harsh or abrasive cleaners.
- Do not submerge any part of the base, mains cable or kettle in water or any other liquids.

Decalcification of your kettle

- The frequency of the decalcification depends on the hardness of the water in your area and how often the appliance is used.
- If the kettle switches off before it boils or has a white deposit building up inside, then it probably needs to be decalcified.
- Do not use vinegar but a commercially available decalcification agent; carefully follow the quantities recommended in the instructions of the decalcification agent.

Technical data

Voltage: 220-240V ~ 50-60Hz
Rated power: 1850-2200W
Capacity: 1.7L