

INSTALLATION INSTRUCTIONS USER GUIDE

VOGUE Vented Dryer 7kg

361172

To prevent the risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time

WARNING

Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The rear surface of appliance shall be placed against a wall.

The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Possible electric shocks

- Disassembly, reparation or modification cannot be carried out by people other than professional maintenance staffs.
- The household electrical supply system(the current, the voltage, the cable) such as a fuse with suitable specifications should be provided. should meet requirements of the dryer under normal load, and safety devices.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not disconnect the power plug by pulling the supply cord. Hold the power plug with your hand.
- Do not use the supply cord when connection of the power plug and the supply cord is loose.
- Do not touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Do not over-bend the supply cord or put it under heavy weight.
- Do not use the supply cord/ socket/power plug if it is damaged or broken.

Possible Explosions

- Do not put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Do not connect/ disconnect the power plug when leakage of gas or other combustible gas occurs.

Fire accidents / short circuit or electric leakage may occur

- Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffer from rainfalls, lest igniting damages or other accidents occur easily due to gathered water drops on electrical components.
- Do not install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Do not use water shooting at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- If you have washed your laundry with stain remover, you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- A carpet must not obstruct the openings in the base.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

Warning

Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.


Personal injury may occur

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The package materials may be dangerous to children. Put all package materials (e.g. the plastic bag) to places unreachable to children.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not touch laundries in the drying drum till the dryer stops working completely.
- Do not keep children or pets nearby when the dryer is working, for they may be trapped into the dryer. Please check carefully the drum before closing the door.


Other instructions

- This appliance is designed for domestic use .It must not be used for purposes other than those for which it was designed .
- Only wash fabrics which are designed to be machine dried . Follow the instruction on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor ,please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins ,safety pins ,nails ,screws ,stones or any other hard ,sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance ,check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps ,waterproof textiles ,rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use ,clean and maintenance.
- Do not overload the appliance .See the relevant section in the user manual.
- Clothes which are dripping wet should not be places in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used ,care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable ,the control panel ,the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final pat of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door ,a sliding door or a door with a hinge on the opposite side to hat of the tumble dryer ,in such a way that a full opening of the tumble dryer door is restricted.
- That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Product description

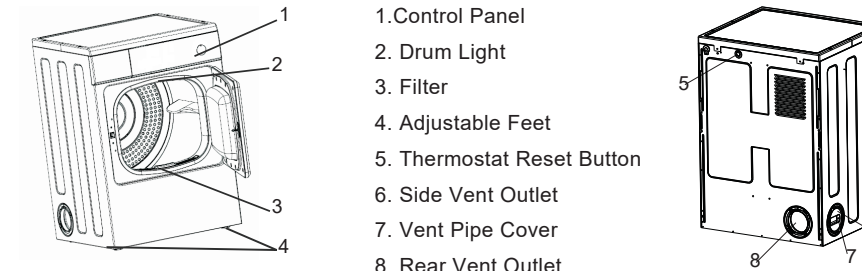

Control panel

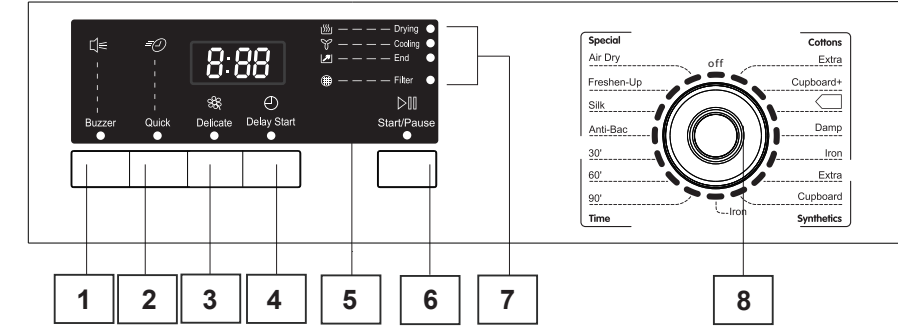


- Buzzer
- Quick
- Delicate
- Delay Start
- Display
- Start/Pause
- Sequence Indicator Lights
- Drying
- Cooling
- End
- Filter
- Programme selector dial

First Use

- Ensure that electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Select the required programme

- Turn the programme selector dial to the required programme. The corresponding light starts to flash. The programme will be switched off if you have not pressed any button for 10 minutes.

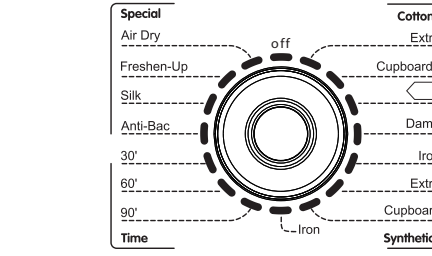

Automatic controlled drying

The appliance detects the moisture in the load and automatically adjust the drying time for optimal drying. Just select the programme according to fabrics. This drying system holds good for cottons, synthetics sections and Anti-Bacterial, Silk programme.

Time controlled drying

Can be used to finish off drying if necessary . Select the 90 or 60 minute programme for cottons or the 30 programme for synthetics . To cancel a programme which is running , turn the programme selector dial to "off". At the end of drying, turn the selector dial to "off" to switch the machine off before removing the laundry.

Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

Select the Buzzer

After turning on the appliance, the buzzer is off if you do none operation. The buzzer can be turned on or be turned off during the process. By pressing "Buzzer" button, the buzzer goes off and the corresponding pilot light comes on. When the buzzer is on, the signal will sound in the following cases:

- When depressing any button.
- At the end of the programme.

When the buzzer is on, if you press the "buzzer" button once more, the buzzer will be switched off.

Select the Quick button

The option can be selected in the following programme: "Extra", "Cupboard+", "□".By depressing this button the drying time will be reduced by 3-5 minutes. The corresponding light illuminates. This option cannot be selected together with "Delicate" option.

Select Delicate

The option can be selected in the following sections: "Cottons", "Synthetics". Pressing this button allows drying to be performed at a lower temperature, for delicate items, the corresponding pilot light comes on. This function cannot be used with QUICK DRYING.

Select Delay start

This button allows you to delay the starting of the programme by 12 hours max. This option must be selected after having selected the programme and before pressing Start/Pause to start the programme. Every time the button is pressed, the time is increased by 1 hour.



It can be selected in both cases before and after selecting option programme (Buzzer, Quick, Delicate). The countdown begins after you have pressed the Start/Pause button and the corresponding light illuminates. The display shows the remaining time. The remaining time is displayed hour by hour.

Display

The display shows the following information: After you have selected the programme, its duration (in hours and minutes) appears on the display . It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the programme starts, the remaining time is displayed every 1 minutes.

Delayed Start

If you have selected a delay time by means of the relevant button, the display shows it. The countdown is displayed hour by hour. Once you press the "Start/Pause" button, the appliance will start the delayed process.

Incorrect option selection

If you select an option that is not compatible with the programme you have selected, the display shows ErS (error). This code will reappear during the execution of the programme if you press one of the option buttons or turn the programme selector .

Select the Start/Pause

Press this button to start the dryer after having selected the programme and the options. If the door of the appliance is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted. In this case the lights flash to remind you that the start button needs to be pressed again.

Indicator lights

These lights indicate the following functions:

- "Drying" light: This light indicates that the appliance is in the drying phase.
- "Cooling" light: This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 5 or 10 minutes cooling phase to cool the laundry.
- "End of programme" light : This light is on at the end of the cooling phase, during the anti-creasing phase.
- "Filter" light: It comes on every cycle to remind you that the filter must be cleaned and at the end of the programme.

Thermostat reset

If during operation, the heating element doesn't work, maybe the manual thermostat disconnect, first turn the programme selector dial to the position "Air Dry" and press the start button, approximately 20 minutes later, press the thermostat reset button.

At the end of the programme

All drying programme end with a 5 or 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase(duration:30 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase. The display shows"End" and the buzzer sounds for 15 seconds if you have selected the buzzer. Turn the programme selector dial to "off", all the lights go out.

Important:

If the door of the appliance is opened while the programme is running, the "Start" button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

After each use

Clean the filter.

Important!

If the drying programme has to be stopped before it reaches the end , we recommend that you turn the programme selector dial to position "Air Dry" and wait until the end of this cooling phase before removing the laundry . This will avoid a build-up of heat inside the appliance. To do this first turn the dial to "off" and then to "Air Dry" and depress the "Start" button.

Modifying the programme

To change a programme which is running, first cancel it by turning programme selector dial to "off" Select the new programme and press the "Start" button.

Drying Hints

Before loading the laundry

Never tumble dry the following :Particularly delicate items such as net curtains ,woolen ,silk ,fabrics with metal trim, nylon tights ,bulky materials such as anoraks ,blankets ,eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam .

- Always follow the instructions on garment labels:

- may be tumble dried
- delicate drying (low temperature)
- normal drying (high temperature)
- do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, too, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles(knitted underwear) may shrink a little during drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer.However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying .
- If individual items are still damp after drying ,set a brief post-drying time ,but at least 30 minutes, This will be necessary particularly for multilayered items (e.g. collars ,pockets ,etc.)

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases ,close zip fasteners ,hooks and poppers. Tie any belts or long tapes. To avoid laundry becoming tangled:

Close zips ,button up duvet covers and tie loose ties or ribbons(e.g.of aprons). Turn items with double-layered fabrics inside out(e.g.with cottonlined anoraks ,the cotton layer should be outermost) . These fabrics will then dry better.

Remove all objects from pockets such as lighters and matches .

Maximum loads

Recommended loads are indicated in the program charts:

General rules: **Cotton, linen:** drum full but not too tightly packed;

Synthetics: drum no more than half full;

Delicate fabrics and woollens: drum no more than quarter full.

Try to load the maximum capacity of the machine as small loads are uneconomical.

