


760170 NO RCC User Manual

Features:

- ▶ Perpetual Calendar Up to Year 2099
- ▶ Day of week in 7 languages user selectable
- ▶ Time in optional 12/24 hour format.
- ▶ Dual daily Alarm Function
- ▶ Snooze function
- ▶ Indoor temperature measurement ranges: -9.9°C (14.2°F) ~ 50°C (122°F)
- Temperature alternatively in °C or °F.
- ▶ Power Supply:
- Battery: LR03 size AAA 1.5V *2

Production Appearance

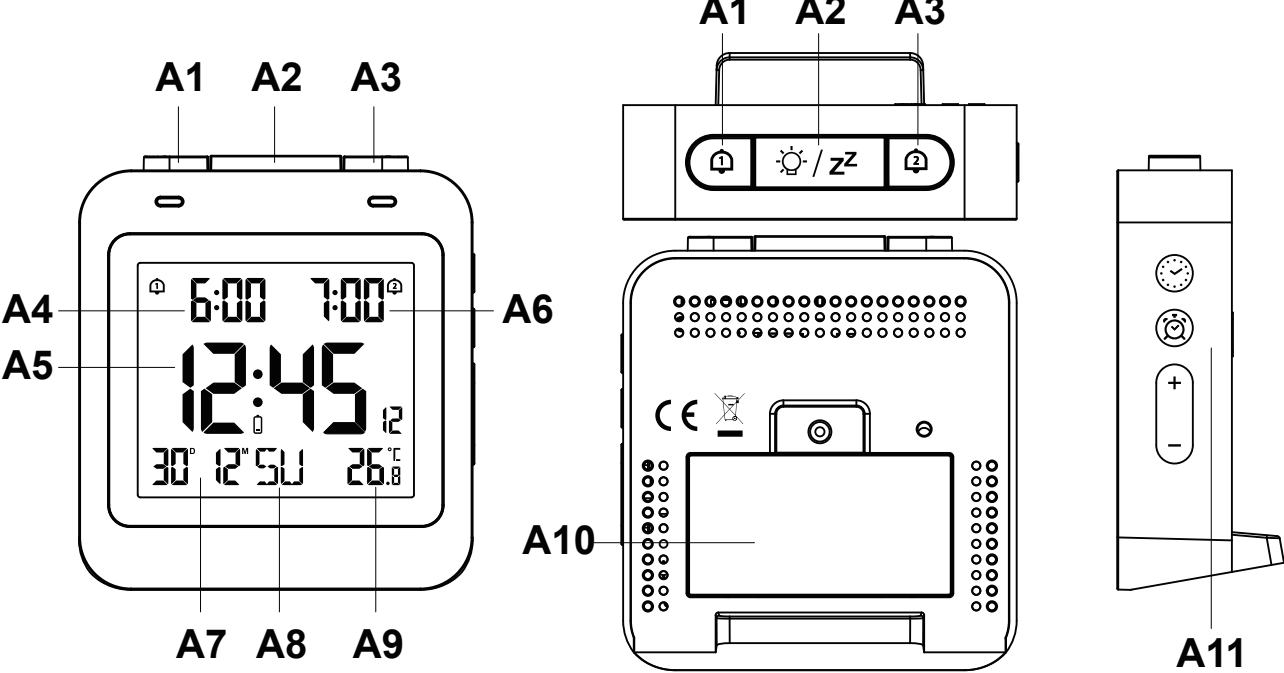

- A1: Alarm1 switch
- A2: Backlight and snooze button
- A3: Alarm2 switch
- A4: Alarm1 time
- A5: Current time
- A6: Alarm2 time
- A7: Date
- A8: Day of week
- A9: Indoor temperature
- A10: Battery compartment cover
- A11: Buttons on the side

760170 NO RCC User Manual

Initial operation

- ▶ Open Production battery compartment cover
- ▶ Insert 2 x LR03 AAA batteries observing polarity ["+" and "-" marks]
- ▶ When you insert the batteries, all the icon on the LCD display will briefly light up for 3 seconds, and you will hear a beep tone, and detect indoor temperature.

Manual time setting

- ▶ Press and hold the button for 2 seconds, into the setting mode, the set item will blink display. Press "+" or "-" buttons to adjustment the value, Press button to confirm the item has been set and go to the next one, the sequence of setting items is as follows:
TIME format(12/24HR) → HOUR → MINUTE → DATE format(D/M or M/D) → YEAR → MONTH → DATE → Language of week
- ▶ Press button to confirm the last item to end the setting procedures, then it will return to the normal mode.

LANGUAGE	GERMAN	ENGLISH	DENMARK	DUTCH	SPANISH	ITALIAN	FRENCH
DAY	GE	EN	DA	DU	SP	IT	FR
SUNDAY	SO	SU	SO	ZO	DO	DO	DI
MONDAY	MO	MO	MA	MA	LU	LU	LU
TUESDAY	DI	TU	TI	DI	MA	MA	MA
WEDNESDAY	MI	WE	ON	WO	MI	ME	ME
THURSDAY	DO	TH	TO	DO	JU	GI	JE
FRIDAY	FR	FR	FR	VR	VI	VE	VE
SATURDAY	SA	SA	LO	ZA	SA	SA	SA

F.Y.I.:

- ▶ If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the set mode.

Setting the daily alarms:

- ▶ Press down the alarm1 switch , it mean that the alarm1 function is ON, the icon is display, press the alarm1 switch again, the switch bounces, it mean that the alarm1 function is OFF, the icon is disappear.
- ▶ Press down the alarm2 switch , it mean that the alarm2 function is ON, the icon is display, press the alarm2 switch again, the switch bounces, it mean that the alarm2 function is OFF, the icon is disappear.
- ▶ Press and hold the button for 2 seconds until the hour of Alarm1 starts to flash. Use the "+" and "-" buttons to set the required hour.
- ▶ Press the button to confirm your setting, the Minute of Alarm1 starts to flash. Use the "+" and "-" buttons to set the required minute.
- ▶ Press the button to confirm your setting, the hour of Alarm2 starts to flash. Use the "+" and "-" buttons to set the required hour.
- ▶ Press the button to confirm your setting, the Minute of Alarm2 starts to flash. Use the "+" and "-" buttons to set the required minute.
- ▶ Press the button to confirm your setting and to end the setting procedure.

F.Y.I.:

- ▶ If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the set mode.
- ▶ The alarm will sound for 2 minutes if you do not deactivate it by pressing any button. In this case the alarm will be repeated automatically after 24 hours.
- ▶ Rising alarm sound (crescendo, duration: 2 minutes) changes the volume 4 times whilst the alarm signal is heard.

Switching off the alarm signal

- ▶ Press any button on the side to stop the alarm signal. It is not necessary to reactivate the alarm. It switches itself automatically to the alarm time which has already been set.

Snooze function

- ▶ Press the button / the alarm signal sounds to get to SNOOZE mode. The alarm signal sounds again after 8 minutes.

Switching °C or °F

- ▶ Press and hold the "+" button 2 seconds to switching the temperature unit in °C or °F.

Backlight

- ▶ Press the button / to active backlight for 8 seconds.